MDT500 MULTIVARIABLE DIGITAL TRANSMITTER





The Meriam Process Technologies (Meriam) Model MDT500 Multivariable Digital Transmitter is a complete flow solution when used with a Meriam Laminar Flow Element (LFE) for air and gas measurement with an accuracy of +/- 0.8% of the calculated flow rate. Communication with the MDT500 is achieved using the Meriam Serial Protocol (MSP), the Meriam DLL or LabVIEW®. The Meriam Software Development Kit (Meriam DLL, MDT Flow Calculator and MDT Config C# sample application and source code, LabVIEW® executable and VI's) is included.



Safety Warnings

The table below defines the safety symbols, signal words and corresponding safety messages used in the manual to identify potential hazards and are intended to warn persons about hazards that could result in personal injury or equipment damage.

This is the R	This is the Read Instruction Manual symbol. This symbol indicates that you must read the instruction manual.			
This is the Safety Alert symbol. When this symbol is located on a product (or nameplate label), this indicates that you must read all sections of the user manual where the symbol appears to understand particularly important safety information regarding electrical or mechanical connections.				
This is the Safety Glasses symbol. This symbol indicates that you must wear approved safety glasses during the task.				
This is the Safety Gloves symbol. This symbol indicates that you must wear approved safety gloves during the task.				
A DANGER	Indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.			
A WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.			
A CAUTION	Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.			
NOTICE	Indicates information essential for proper product installation, operation or maintenance.			

Information in this document is subject to change without notice. Check the Meriam web site (<u>www.meriam.com</u>) for latest manual revision.

For customer assistance please call your local Meriam representative or Meriam directly.

Meriam Process Technologies 10920 Madison Avenue Cleveland, Ohio 44102

Telephone: (216) 281-1100 Fax: (216) 281-0228

E-mail: <u>meriam@meriam.com</u> Web: <u>www.meriam.com</u>

LabVIEW[®] is a registered trademark of National Instruments

Table of Contents

Introduction	. 4
CD ROM Resources	. 4
Interface Accessories	. 5
Installation and Operation	. 5
Zeroing the MDT500	. 6
Firmware Reflash	. 7
Service and Calibration	. 7
Return Instructions	. 8
Specifications /Certifications	. 9

MDT500 Safety



Failure to follow all instructions could result in injury. Read, understand and follow all safety warnings and instructions provided with this product. Also, meet or exceed your employer's safety practices.

In no event shall Meriam be liable for any indirect, special, incidental, consequential or punitive damages or for any lost profits arising out of or relating to any services provided by Meriam or its affiliates. It is not possible for Meriam to identify all foreseeable uses/misuses, therefore all persons involved in commissioning, using or maintaining this product must satisfy themselves that each intended application is acceptable.

A DANGER Fire/Explosion Hazard. This instrument is not intrinsically safe. DO NOT use or service in areas that may contain flammable gas or vapors, combustible dusts or ignitable fibers where an unintended spark can cause a fire/explosion.

A WARNING Do

Do not exceed the Pressure Limits listed in the Specifications section of this manual. Failure to operate within the specified pressure limit could result in death or serious injury.

A CAUTION

 Do not exceed the Maximum Input Voltage listed under "Power Requirements" in the Specification section of this manual

- Disconnect power before servicing.
- Substitution of components may impair operation and safety.

Introduction

Congratulations! The MDT500 is the ideal compact, direct mounted solution for air and gas flow measurement. Follow the instructions in this User's Manual to set up the MDT500 to perform to its full potential. Thank you for choosing Meriam.

Included with the MDT500

- RTD Probe
- USB cable
- CD-ROM
- A NIST traceable calibration certificate for Model numbers:

ZMDT-X-X purchased without an LFE will receive a 6-point pressure calibration. ZMDT-X-X-MT and LFE purchased as a system will receive a 3-point air flow calibration.

CD ROM Resources

Each MDT500 comes with a product CD ROM that includes the following resources:

- Meriam Software Development Kit
- Meriam Setup Utility
- Meriam Serial Protocol (MSP) Implementation Guide
- USB Drivers
- LabVIEW[®] Drivers (VIs)

Please make use of these resources as referenced in this manual.

NOTICE USB drivers must be installed on the host PC prior to communication with MDT500. Find these drivers on the product CD.

Interface Accessories

The following table lists part numbers for various accessories available to assist in configuration or communication.

Part Number	Description	Accessory Status
Z9A00003PN06	MDT500 Product CD ROM	Standard, all models
Z9P703	Male Adapter	Standard, LFE mounted model
ZA36894-3	Male Connector	Standard, LFE mounted model

Installation and Operation

The MDT500 is designed to be operated in conjunction with a Windows PC and the Meriam Software Development Kit (SDK) which is provided for ease of integration with your systems. The SDK includes libraries for calculating flow rate and for communicating with the device to take measurements and access configuration options. Example applications are provided, as source code and as executables that implement key features of the Virtual Flow Instrument library.

Examp_Virtual_Flow_Instrument.vi File Edit View Project Operate Iools	<u>Window</u> <u>H</u> elp						
MDT500 MULTIVARIABLE DATA TRANSMITTER meriam							
	MEASUREMENTS	CALCULATED VALUES					
Differential Pressure 0.00000E+0	POUNDS_PER_SQUARE_INCH	Mass Flow Rate 0.00000E+0 POUNDS PER_MINUTE					
Absolute Pressure 0.00000E+0	DUNDS_PER_SQUARE_INCH	Volumetric Flow Rate 0.00000E+0 CUBIC_FEET PER_MINUTE					
Temperature 0.00000E+0] [DEGREES_FAHRENHEIT	Volumetric Flow Rate 0.00000E+0 CUBIC_FEET PER_MINUTE					
Relative Humidity 0.00000E+0	PERCENT	Density 0.00000E+0 POUNDS PER CUBIC FOOT					
		Viscosity 0.00000E+0 MICROPOISE					
	STANDARD CONDITIONS OF FLOW	CALCULATE TAKE MEASUREMENTS AND CALCULATE					
Coefficient 1 0.00000E+0	Temperature 7.00000E+1 DEGREES FAHRENHEIT						
Coefficient 2 0.0000E+0 Coefficient 3 0.0000E+0	Pressure 1.46960E+1 POUNDS PER SQUARE INCH	CONFIGURATION FILES					
Coefficient 4 0.00000E+0							
Coefficient 5 0.00000E+0	MDT COMMUNICATION						
Equation	COM1 CONNECT	SAVE CONFIGURATION					
< H							

The SDK can be used as both a .NET class library and a LabVIEW VI library. See the Meriam_SDK_Overview.pdf and help file located in the SDK Documentation directory for details.

MDT/LFE Connections

The supplied RTD Probe must be connected prior to use. DO NOT allow the RTD probe sheath to directly contact line voltage, e.g., 120VAC

Use with high power (500 mA) USB ports or powered USB hubs only. Keep at least four inches from high power 3-phase cables.

Do not run in parallel with 3-phase power cables. Cross existing AC power cables at right angle only when necessary for routing purposes.



50MK10, 50MJ10, 50MW20, 50MH10, 50MY15 SERIES LAMINAR FLOW ELEMENTS

Zeroing the MDT500

Meriam recommends zeroing the MDT500 Differential Pressure sensor prior to use and periodically thereafter as needed. Use the MDT Config example application included in the Meriam SDK to zero the sensor.

MDT Config (Connected)						
Recalibration						
Differential Pressure	Absolute Pressure	Temperature				
Measurement 14.33494	Measurement -0.008017974	Measurement 32				
Set To 0.0	Set To -0.008121103	Set To 32				
Zero	Reset to Default Apply	Reset to Default Apply				
Damping						
Differential Pressure	Absolute Pressure	Temperature				
Damping Type Exponential 🗸	Damping Type Exponential 🗸	Damping Type Exponential				
Time (sec) 3	Time (sec) 4	Time (sec) 1				
Set	Set	Set				
MDT Communication COM6						

Unzip %InstallationDirectory%\Meriam\SDK\Examples\CSharp\MDT Config Executable (this may have to be unzipped to a location other than the Program Files or Program Files(x86) directory), launch MDT Config.exe, set the appropriate Com Port and click the Connect button. Then click the Zero button in the Differential Pressure section.

Meriam recommends zeroing the MDT500 in its final mounting position to null any orientation effects due to local gravity.

Firmware Reflash

NOTICE

Meriam periodically issues new operating firmware to improve MDT500 operation and features. All MDT500 units can be reflashed with new firmware using the EI Reflash Utility software included on the CD.

Install Meriam Setup Utility. Connect the MDT500 to the host PC. Navigate to the Meriam Setup Utility directory and open El Reflash Utility.exe. Select COM Port and baud rate (115200). Click "Check Web" to download updates, then "Auto Update" to ensure the MDT500 has the latest firmware and features.

Service and Calibration

In the event an MDT500 requires service or needs to be returned for factory recertification or re-calibration, please contact Meriam at the numbers listed on the next page.

NOTICE DO NOT send any unit in for service without first contacting Meriam for a Return Material Authorization (RMA) number. If this number has not been obtained and clearly marked on the return packaging, the unit will be returned at the shipper's expense.

An RMA number will be provided by the Meriam Repair Department when you call, fax or e-mail your information. Certification for Non-Hazardous Materials will also be required. The RMA number must accompany all incoming packages to insure proper tracking, processing and repair work.

To assist us in processing your service request, please have the Model & Serial Number of the unit available when you call. This information is located on the product label.

Return Instructions

To lessen the possibility of shipping damage it is recommended the MDT500 be detached from the LFE for shipping.

1. When returning the LFE care should be taken to protect the LFE Matrix by covering up the open ends of the LFE.

2. Carefully detach the MDT500 from the LFE by loosening the 9/16 hex nuts on the two male connectors attached to the MDT to separate from the LFE (see illustration).

3. Package MDT with sufficient protective KEM pack or bubble wrap to protect against damage during shipping.

4. Package LFE with sufficient protective KEM pack or bubble wrap to protect against damage during shipping.

5. Place both packaged LFE and MDT into one container with additional KEM pack or bubble wrap.



Meriam Process Technologies 10920 Madison Avenue Cleveland, Ohio 44102

TELEPHONE: (216) 281-1100 FAX: (216) 281-0228

E-mail: service1@meriam.com Web Site: www.meriam.com

Specifications /Certifications

Overall Technical Specifications

Media Compatibility

Clean, dry, non-corrosive gases only (brass, 316 SS, Viton, Silicon gel)

Software

Supported Operating Systems

Windows XP Windows 7/Vista

.NET Framework 4.0

Software Development Kit (SDK)

Example Programs with Source Code in LabVIEW® C# Application Programming Interface (API) Supporting .NET (C# / VB) COM Interop

Pressure Measurement

NIST Traceable Accuracy

± 0.025 % of full scale including all effects of linearity, repeatability, hysteresis, and temperature (-20°C to +50°C)

Operating Temperature

-4°F to +122°F (-20°C to +50°C)

Pressure Update Rate

7 readings per second from both differential and absolute pressure sensors

Optional Pressure Ranges

Differential Sensor: 28 inches water column 10 inches water column

Absolute Sensor: 38 psia 100 psia

Over Range Limits

Differential Sensor: 2x range when pressurized on P1 (HI) side only; 150 psi when applied simultaneously to P1 (HI) & P2 (LO) sides

Absolute Sensor: 2x range

Media Compatibility

Differential Sensor: Clean, dry, non-corrosive gases only (brass, 316 SS, Viton®, Silicon gel)

Absolute Sensor: Media compatible with 316 SS

Resistance/Temperature Measurement

NIST Traceable Accuracy

(+ 0.01 % of reading + 0.075 ohms) including all effects of linearity, repeatability, hysteresis, and temperature

Operating Temperature

-4°F to +122°F (-20°C to +50°C)

Temperature Update Rate

14 readings per second

Temperature Sensor Specifications

Accuracy Class AA Tolerance Class (per IEC 60751)

Temperature Range -58°F to +482°F (-50°C to +250°C)

Connector is +185°F (+85°C Max)

Material

316L Stainless Steel Sheath and Housing

Temperature Probe Pt100 (100 Ohms at 0°C, .00385 TCR (alpha))

Probe Dimensions

1/4" diameter, 6" long

Connections 5 meter M12 molded cordset

Mechanical

P1 & P2 Pressure Ports: ¹/₄" NPT (female) Flushing Ports: 5/16 – 24 SAE/MS J1926 (316L SS plugs included)

Electrical / Communication

USB: type B female connector Analog: circular, locking connector for RTD probe

Power Requirements

PC USB: high power (500 mA) USB port or USB hub (PC USB ports and USB hubs with power adapters that are typically high power)



Note: User is responsible to provide controlled, fuse protected power from an IBM compatible computer via the USB port.

Enclosure

Protection: IP40 Dimensions (in/mm): H x 2.6 (66), W x 3.6 (91), L x 5.6 (142) Material: Plastic (ABS) Weight: 1.5 lbs. (Hook up fittings add 0.26 lbs. (0.118 kg))

Mounting

Laminar Flow Element mounting hardware provided

Temperature Limits

Operating: -4 to 122°F (-20 to 50°C) Storage: -40 to 185°F (-40 to 85°C)

Humidity Limits

5 – 95% RH operating

CE Marking

 EN 61326-1 Electrical equipment for measurement, control and laboratory use - EMC requirements^{1,2}
 IEC 61010 Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use²

1 – FOR USE ONLY IN A CONTROLLED EMC ENVIRONMENT, TYPICALLY FOUND IN A TEST, MEASUREMENT AND CALIBRATION ENVIRONMENT. 2 – CLASSIFIED AS CAT-1 (VOLTAGES NOT PRESENT OR MEASURED ABOVE 60VDC)

Hazardous Material and Recycling Compliance

This product is compliant with the European directives:

- RoHS directive 2002/95/EC, "Reduction of Hazardous Substances", and
- WEEE 2002/96/EC, "Waste from Electrical and Electronic Equipment".



The WEEE mark informs users of electrical and electronic equipment to ensure proper disposal.

Spare Parts

- Z9P703 Adapter-Male-Machine ¼" Tube X ¼" MNPT Brass
- ZA36894-3 Male Connector 1/4" Tube X 1/4" MNPT Brass
- Z9P273 Cable, USB, Type "A" To Mini "B"
- Z9P713 Cable, RTD-4 Pos Plug-Socket 5.0M
- Z9P521 Probe-RTD Sensor