

## M202 Precision Absolute Manometer

### USER'S MANUAL



Meriam Process Technologies' M202 Precision Absolute Manometer is a microprocessor based pressure sensing device used to directly measure pressure relative to absolute zero. Pressure can be displayed in a variety of user-selected engineering units. All units include a Tare function, a Min/Max function, selectable damp rates and altitude displayed in feet or meters. The M202 will display local barometric pressure or can be set up to display barometric pressure corrected to sea level. Data Logging and Leak Test functions are standard.

M202 models are available for general purpose use or with optional Intrinsically Safe certification to the specification shown below.

Optional ATEX rating:

CE 0539 © II 1 G; DEMKO 06 ATEX 0615699

Ex ia IIC T4

(Tamb. -5°C to +50°C)

IP40

# Safety Information











Failure to follow all instructions could result in injury. Read, understand and follow all safety warnings and instructions provided with this product. Also, meet or exceed your employer's safety practices.

In no event shall Meriam be liable for any indirect, special, incidental, consequential or punitive damages or for any lost profits arising out of or relating to any services provided by Meriam or its affiliates. It is not possible for Meriam to identify all foreseeable uses/misuses, therefore all persons involved in commissioning, using or maintaining this product must satisfy themselves that each intended application is acceptable.

## Safety Warnings

The table below defines the safety symbols, signal words and corresponding safety messages used in the manual to identify potential hazards and are intended to warn persons about hazards that could result in personal injury or equipment damage.

	This is the Read Instruction Manual symbol. This symbol indicates that you must read the instruction manual.
	This is the Safety Alert symbol. This symbol indicates a WARNING. Warnings alert you to actions that can cause personal injury or pose a physical threat. Please read these carefully.
	This is the Safety Glasses symbol. This symbol indicates that you must wear approved safety glasses during the task.
	This is the Safety Gloves symbol. This symbol indicates that you must wear approved safety gloves during the task.
	Indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.
	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.
	Indicates information essential for proper product installation, operation or maintenance.

Information in this document is subject to change without notice. Check the Meriam web site ([www.meriam.com](http://www.meriam.com)) for the latest manual revision.

For customer assistance please call your local Meriam representative or Meriam directly.

Meriam Process Technologies  
10920 Madison Avenue  
Cleveland, Ohio 44102

Telephone: (216) 281-1100  
Fax: (216) 281-0228

E-mail: [meriam@meriam.com](mailto:meriam@meriam.com)  
Web: [www.meriam.com](http://www.meriam.com)

## Table of Contents

Certification/Safety/Warnings .....	1
User Interface.....	4
1. Keypad Functions .....	4
On/Off & ◀ (backspace) Key .....	4
Min/Max & ▲ (up) Key .....	4
Tare & ▼ (down) Key .....	4
Prgm & ▶ (enter) KEY .....	5
Backlight Key .....	5
2. Zeroing the Manometer .....	5
Referenced to Absolute Zero.....	6
Factory Zero .....	7
User-Adjusted Zero .....	8
3. Program Mode.....	9
Units Select .....	10
Displaying Altitude (US Standard Atmosphere 1962).....	11
Display User Defined Altitude .....	12
Pressure Corrected to Sea Level .....	14
Damp Rate Select .....	16
User Info Select (Accuracy, SW version, Mfr date, SN) .....	17
Auto Shut-Off.....	18
Lockout Select .....	19
Header Name .....	20
Contrast Select .....	21
Data Logging .....	22
Leak Test .....	23
Re-Calibration .....	24
Re-Calibration - 1 Point EDIT and START .....	25
Re-Calibration - 5 Point EDIT .....	26

Re-Calibration - 5 Point START .....	27
Re-Calibration - Restore Factory Defaults .....	28
Specifications .....	29
User Connections .....	33
Service and Calibration .....	34



# Certification/Safety/Warnings

All M202 models are available for general purpose use (non-hazardous areas) or with optional Intrinsically Safe (I.S.) certification for hazardous area use

General Purpose (G.P.) versions are identified by the name plate located on the rear of the unit under the protective rubber boot. A sample of the General Purpose name plate is shown below:



Intrinsically Safe versions are identified by the name plate located on the rear of the unit under the protective rubber boot. A sample of the I.S. name plate is shown below:



Intrinsically Safe versions are shipped with Dwg. No. 9R000056 "M2 Series Intrinsically Safe Control Document". Refer to this document for details of the certification, a list of warnings and a list of approved batteries for use in Intrinsically Safe versions.

## **⚠ DANGER** For Intrinsically Safe M202

Use Intrinsically Safe units in accordance with Dwg. No. 9R000056 "M2 Series Intrinsically Safe Control Document" only. This document accompanies each I.S. unit. Failure to use the unit in accordance with this document will void the

certification and may cause potentially dangerous conditions.

**⚠ WARNING**

**For Intrinsically Safe M202**

- Restrictions apply to the use of Intrinsically Safe models in hazardous areas. Refer to the Intrinsic Safety Control Drawing No. 9R000056, “M2 Intrinsically Safe Control Document”, for more information.
- Substitution of components will void the Intrinsically Safe Certification and may impair operation and safety. Do not substitute components. Repairs must be made at the factory to retain the Intrinsically Safe certification.
- Service only in safe areas. Customer service is limited to battery replacement and field recalibration only. All other service must be provided by the factory to retain the Intrinsically Safe Certification.
- To prevent ignition of flammable or explosive atmospheres, disconnect power before servicing in a safe area.
- To prevent ignition of flammable or explosive atmospheres,
  - **DO NOT** open or service unit, including battery compartment, in flammable or explosive atmosphere
  - **DO NOT** rub, clean or wipe the surface of the membrane keypad as it may build a static charge
  - **DO NOT** mix old batteries with new or mix batteries from different manufacturers
  - **DO NOT** replace batteries in explosive or hazardous atmosphere
  - **DO NOT** use any battery type other than those listed on Dwg. No. 9R000056 “M2 Intrinsically Safe Control Document”.

**⚠ DANGER**

**For General Purpose M202**

Fire/Explosion Hazard. Do not use General Purpose units in hazardous areas. DO NOT use General Purpose units in areas that may contain flammable gas or vapors, combustible dusts or ignitable fibers where an unintended spark can cause a fire/explosion.



**⚠ CAUTION** For General Purpose M202

- Substitution of components may impair operation and safety.
- Disconnect power before servicing.
- The product should not be powered with a combination of new and old batteries.
- The product should not be powered with a combination of batteries from different manufacturers.

**⚠ WARNING** For All M202 Models

Do not exceed the Pressure Limits listed in the Specifications section of this manual. Failure to operate within the specified pressure limit could result in minor or moderate injury.

**NOTICE** For All M202 Models

User must use a wrench on the pressure manifold when installing user's 1/8" NPT fitting. Do not tighten the fitting without using a wrench on the pressure manifold. Failure to use a wrench on the manifold will damage the plastic enclosure and void warranty. No torque should be applied to the manifold with respect to plastic enclosure.

# User Interface



## 1. Keypad Functions

### On/Off & ◀ (backspace) Key

Turns the manometer on and enters the unit into the **Measure Mode**. Pressing the key while in the **Measure Mode** turns the unit off. It also serves as a backspace key when editing in the **Program Mode**. The ◀ key takes the user out of a programmable register without changing the previous setting. Pressing this key repeatedly will return the user to the **Measure Mode** and then shut off the manometer.

### Min/Max & ▲ (up) Key

In the **Measure Mode** activates the **Min/Max** function of the manometer. When activated the minimum value is displayed on the upper left of the display and the maximum value on the upper right. This key also deactivates and resets this function. The ▲ key is used to scroll through the programmable registers when the unit is in the **Program Mode**. Once a programmable register is selected the ◻▲ key can be used to edit that register.

### Tare & ▼ (down) Key

In the **Measure Mode** toggles the **Tare** function on/off. The **Tare** function sets the display value to "0". With **Tare**

activated, the letter “T” appears in the lower left of the display. The ▼ key is used to scroll through programmable registers with the unit in the **Program Mode**. Once a programmable register is selected the ▼ key can be used to edit that register.

### **Prgm & ► (enter) KEY**

Puts the manometer into the **Program Mode** from the **Measure Mode**. When in the **Program Mode**, pressing this key selects the programmable register to be edited (with prompt for password if **Lockout** is set). After the register has been edited, pressing the PRGM key enters the new setting into the manometer’s non-volatile memory. This key also acts as a ► key when editing user input such as the header name and user units.

### **Backlight Key**

The BACKLIGHT key, represented by the standard light bulb symbol, toggles the display backlight between green and off.



The backlight consumes additional battery energy. Turn the backlight off to optimize battery life.

## **2. Zeroing the Manometer**

The M202 Precision Smart Manometer is a stable and precise instrument. However, on occasion the M202 should have a new zero taken. This is done to remove zero drift that can occur since the manometer was last zeroed. The M202 can be zeroed only if the new applied zero is within  $\pm 1\%$  FS of the original factory calibration zero. This prevents accidental zeroing at atmospheric pressure or other relatively high pressures. If outside this limit a “ZERO RANGE ERROR” message appears and the manometer will not zero.

The M202 provides three mechanisms for re-zeroing:

**Referenced to Absolute Zero:** This traditional *and preferred* method takes a “snapshot” of the measured

pressure when a vacuum of less than 100 microns Absolute is applied to the sensor.

**Factory Zero:** This method restores the calibration curve to the original zero taken at the factory. Note that this feature is intended for comparison purposes, and should not be used for real pressure measurement, as any zero-drift will not be compensated.


**User-Adjusted Zero:** This method allows the user to enter any pressure value when a known reference is applied (for example, the local barometer). The manometer will compare its actual measured value with the entered value, and calculate a new zero reference based on the offset.

### **Referenced to Absolute Zero**

To zero the manometer using **Referenced to Absolute Zero**, start with the unit turned **OFF** and use the following keystroke sequence:

Keystroke	Display
1. Press ON/OFF button.	The display briefly shows header name and full scale range in the last engineering unit selected. Then goes into the <b>Measure Mode</b> to display pressure
2. Connect the M202 to a vacuum source capable of a vacuum of 100 microns absolute pressure or less.	
3. Pull a full vacuum.	Display should read close to zero. (See note on next page)
4. Press Min/Max and Tare keys at the same time. (See figure 1 below.)	Top line of display reads "ZEROING SOURCE:" Bottom line of display reads "REF TO ABS ZERO"

<p>5. Press the PRGM key.</p>	<p>Top line of display reads “ZERO IN PROGRESS” while bottom line counts down from 9. Zeroing is complete when unit returns to Measure Mode.</p>
-------------------------------	--

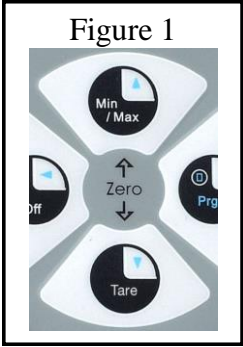

**Factory Zero**

To zero the manometer using **Factory Zero**, start with the unit turn **ON** and in **Measure Mode** and use the following keystroke sequence:

Keystroke	Display
<p>1. Press MIN/MAX and TARE keys at the same time. (See figure 1 above.)</p>	<p>Top line of display reads “ZEROING SOURCE:” Bottom line of display reads “REF TO ABS ZERO”</p>
<p>2. Press ▲ or ▼ arrow key until desired zero function is shown on the bottom line.</p>	<p>Bottom line of display reads “FACTORY ZERO”</p>
<p>3. Press the PRGM key.</p>	<p>Zeroing is complete when unit returns to Measure Mode.</p>

NOTE: The M202 can be zeroed only if the new applied zero is within ± 1% FS of the original factory

calibration zero. If outside this limit a “ZERO RANGE ERROR” message appears and the manometer will not zero. Contact the factory for support in this case.

### User-Adjusted Zero

To zero the manometer using **User-Adjusted Zero**, start with the unit turn **ON** and in **Measure Mode** and use the following keystroke sequence:

Keystroke	Display
1. Apply a known, accurate pressure source. This may be true atmospheric pressure, with known reference defined by a local barometer.	
2. Press MIN/MAX and TARE keys at the same time. (See figure 1 above.)	Top line reads “ZEROING SOURCE:” Bottom line reads “REF TO ABS ZERO”
3. Press the ▲ or ▼ arrow key until desired zero function is shown on the bottom line.	Bottom line of display reads “USER ADJ. ZERO”
4. Press the PRGM key.	Top line shows the current <i>non-zero compensated</i> pressure value. Bottom line of display shows the same value, along with the engineering unit.
5. Press the ▲ or ▼ arrow key or the PRGM key to begin editing.  Example: set current pressure value to 29.5 In Hg @ 0° C.	Top line of display continuously updates. Bottom line of display is ready for editing.

<p>6. Press the ▲ or ▼ arrow key to set the first digit to 0.</p> <p>Using the ▲ arrow key the character sequence is 0 - 9, (-) negative, (.) decimal point. Use the (-) sign for locations below sea level.</p>	<p>Current: xxx.xx 0xx.xx INHG</p>
<p>7. When the digit is correct press the PRGM key.</p> <p>If an error is made use the back space ◀ key to move the cursor back to the incorrect digit. Press the UP ▲ or DOWN ▼ arrow keys to display the correct value.</p>	<p>Cursor flashes to the right of "0".</p>
<p>8. Continue this process until the display reads as shown at right.</p>	<p>Current: xxx.xx 029.50 INHG</p>
<p>9. Press the PRGM key to enter the final digit.</p>	<p>Zeroing is complete when unit returns to Measure Mode.</p>

Note that the User Adjusted Zero feature will not accept entries in altitude units (FEET or METERS). When the current engineering unit is FEET, the User Adjusted Zero function will automatically prompt for an entry in Inches of Mercury @ 0° C. When the current engineering unit is METERS, the User Adjusted Zero function will automatically prompt for an entry in Millimeters of Mercury @ 0° C.

### 3. Program Mode

The program mode is used to configure the manometer for Measure Mode operation. After the **PRGM** key is pressed in Measure Mode, the top line of the display reads "PROGRAM MODE". The bottom line reads "UNITS SELECT". Press the

▲ or ▼ arrow keys to scroll through the Program Mode to the desired register. The configurable registers found in the **Program Mode** are **Units Select, Damp Rate Select, User Info Select, Contrast Select, Sea Level Select, Data Logging, Leak Test and Exit**. Press the **PRGM** key to select any of these configurable registers and set up their respective function. The manometer can be put into **Program Mode** at any time during Measure Mode operation by pressing the **PRGM** key. If Lockout is set, the correct code must be entered when prompted (see the User Info / Lockout section of this manual for more information on Lockout).

## Units Select

Standard engineering units available are:

Inches of Mercury at 0° C (in Hg @ 0° C), Millimeters of Mercury at 0° C (mm Hg @ 0° C), PSI, mbars, Bars, kPa, Torr, Feet (Altitude displays), Meters (Altitude displays)

To change the engineering units the manometer should be "ON" and in Measure Mode. Then follow these steps:

<b>Keystroke</b>	<b>Display</b>
1. Press the PRGM key.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
2. Press the PRGM key.	Top line reads "UNITS SELECT", Bottom line shows current engineering units.
3. Press the ▲ or ▼ arrow key until desired engineering unit is displayed.	Engineering units on bottom line of display change.
4. Press the PRGM key to select the displayed engineering unit.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
5. Press the ▼ key.	Bottom line reads "EXIT".
6. Press the PRGM key.	Display returns to Measure Mode in new engineering unit.



## Displaying Altitude (US Standard Atmosphere 1962)

The model M202 is capable of displaying altitude in feet or meters based on U.S. Standard Atmosphere 1962 tables. To set the M202 to read out referenced to this altitude standard use the following steps:

<b>Keystroke</b>	<b>Display</b>
1. Press the PRGM key.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
2. Press the PRGM key.	Top line reads "UNITS SELECT" and bottom line shows current engineering unit.
3. Press the ▲ or ▼ arrow key until "USER UNIT SELECT" is displayed.	Top line reads "UNITS SELECT" Bottom line reads "FEET or METERS".
4. Press the PRGM key.	Top line reads "ALTITUDE SELECT". Bottom line reads "STANDARD".
5. Press the PRGM key.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
6. Press the ◀ key.	Manometer returns to Measure Mode. Displays altitude referenced to US Standard Atmosphere 1962.

## Display User Defined Altitude

User Defined Altitude is useful in determining elevation change from a map elevation reference or from a survey trig marker elevation. To set up the M202 to display altitude based on user entered information, use the following steps:

Keystroke	Display
1. Press the PRGM key.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
2. Press the PRGM key.	Top line reads "UNITS SELECT" and bottom line shows current engineering unit.
3. Press the ▲ or ▼ arrow key until "FEET or METERS" is displayed.	Top line reads "UNITS SELECT" Bottom line reads "FEET or METERS".
4. Press the PRGM key.	Top line reads "ALTITUDE SELECT". Bottom line reads "STANDARD".
5. Press the ▲ arrow key once.	Top line reads "ALTITUDE SELECT". Bottom line reads "REF. TO USER".
6. Press the PRGM key.	Top line reads "VALUE=: 00000000". Bottom line reads "CHANGE?: NO".
7. If the value shown in step 6 is the correct altitude, press the <b>PRGM</b> key to accept and the ◀ key to return to Measure Mode.  - OR -  If the value shown in step 6 is not the correct altitude, press the ▼ key	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".  Top line reads "VALUE=: 00000000". Bottom line reads "CHANGE?: YES".
8. Press the PRGM key.  Example: set altitude to 685 feet above sea level.	Top line reads "USER MODE-FEET". Bottom line reads "00000000".

<p>9. Press the ▲ or ▼ keys to set the first digit to “6”.</p> <p>Using the ▲ key the provides the character sequence 0 - 9, ( - ) negative, and ( . ) decimal point. The ( - ) sign is used if your location is below sea level.</p>	<p>Top line reads “USER MODE-FEET”. Bottom line reads “60000000”.</p>
<p>10. When digit is correct press the PRGM key.</p> <p>If an error is made use the back space ◀ key to move the cursor back to the incorrect digit. Press the ▲ or ▼ arrow keys to display the correct value.</p>	<p>Cursor flashes to the right of the “6”. Example: “6<u>0</u>000000”.</p>
<p>11. Continue the process until the display reads as shown at right.</p>	<p>Top line reads “USER MODE-FEET”. Bottom line reads “685.0000”.</p>
<p>12. Press the PRGM key to enter the final value.</p>	<p>Top line reads “PROGRAM MODE”. Bottom line reads “UNITS SELECT”.</p>
<p>13. Press the ◀ key to return to Measure Mode.</p>	<p>Top line reads “altitude referenced to 685”. Bottom line reads “U 685 FEET”.</p>

To set the unit to read in meters, select METERS from the UNITS SELECT menu. Then follow the same steps as outlined above.

Because the local barometer varies with weather conditions, the USER DEFINED ALTITUDE must be reentered each time the M202 is to be used in this mode. To adjust the unit to the current barometric pressure without changing the base altitude, select “NO” in step 6 in the table above by pressing the PRGM key. The M202 will display the current altitude referenced to prevailing local barometric pressure. To maximize accuracy the local altitude should be reset whenever better altitude information is available.

## Pressure Corrected to Sea Level

Pressure reduction to Sea Level is required so that barometric readings can be compared at different elevations. The correction to sea level is done using a “hypsonometric equation”. This equation simulates a “fictitious column of air” which extends downward from the instruments location to sea level. This fictitious column is assumed to be similar to the actual air column over nearby lower elevations. Some properties are related to observed conditions while others must be assumed. Barometric pressures given by the National Weather Service and used at airports are always corrected to sea level.

To set the unit to display pressure corrected to sea level:

Keystroke	Display
1. Determine the elevation of the instrument above sea level, in meters. 700 meters will be used as an example.	
2. From Measure Mode press the PRGM key.	Top line reads “PROGRAM MODE”. Bottom line reads “UNITS SELECT”.
3. Press the ▲ or ▼ key until “SEA LEVEL SELECT” is displayed.	Top line reads “PROGRAM MODE”. Bottom line reads “SEA LEVEL SELECT”.
4. Press the PRGM key.	Top line reads “SEA LEVEL SELECT”. Bottom line reads either “ENABLE” or “DISABLED”.
5. Press the ▲ or ▼ key to indicate the correction to sea level status.	Bottom line toggles between “ENABLE” and “DISABLED”.
6. To turn on the correction, set ENABLED on the 2 <sup>nd</sup> line & press the PRGM key. <b>-OR-</b>	Top line reads “VALUE=: 00000000”. Bottom line reads “CHANGE?: NO”.

<p>To turn off the correction, set DISABLED on the 2<sup>nd</sup> line and skip ahead to step 12.</p>	
<p>7. To change the value press the ▲ key to toggle the display to “YES”.</p>	<p>Top line reads “VALUE=: 00000000”. Bottom line reads “CHANGE?: YES”.</p>
<p>8. Press the PRGM key.</p>	<p>Top line reads “SEA LEVEL METERS”. Bottom line reads “<u>0</u>0000000”.</p>
<p>9. Press the ▲ or ▼ arrow keys to set the correct value in the first digit.</p>	<p>Top line reads “SEA LEVEL METERS”. Bottom line reads “<u>7</u>0000000”.</p>
<p>10. When the value is correct press the PRGM key.</p>	<p>Cursor moves over to the next digit.</p>
<p>11. Repeat steps 9 and 10 above until the correct elevation is entered.</p>	<p>Top line reads “SEA LEVEL METERS”. Bottom line reads “<u>700</u>.0000”.</p>
<p>12. Press the PRGM key to continue moving the cursor to the right. When the last digit is entered the unit will leave the sea level select mode and return to the Program Mode.</p>	<p>Top line reads “PROGRAM MODE”. Bottom line reads “UNITS SELECT”.</p>
<p>13. Press the ◀ key. The display will return to the Measure Mode. When the Correction to Sea Level is ENABLED, the display will have the letter “S” at the beginning of the 2<sup>nd</sup> line.</p>	<p>Display reads; “S 803.1 TORR”</p>

## **Damp Rate Select**

Adjustable exponential type damping is available to steady the display when measuring pulsating pressure or flow. The Smart Manometer has a range of damping rates; 0.1, 0.2, 0.5, 1, 2, 5, 10, or 25 seconds. Exponential damping shows approximately 70% of a step change in pressure upon the next display update. When set for 5 second time constant, it takes 5 seconds from the time of the step change until the manometer displays the full value of the new pressure.

To set the damp rate, follow the steps below:

<b>Keystroke</b>	<b>Display</b>
1. Follow the steps on page 4 to put the unit in Program Mode	Top line reads PROGRAM MODE" and bottom line reads "UNITS SELECT".
2. Press the ▲ arrow key.	Bottom line reads "DAMP RATE SELECT".
3. Press the PRGM key.	Top line reads "DAMP RATE SELECT".
4. Press the ▲ or ▼ arrow key until the desired damp rate is displayed on the bottom line.	Bottom line shows damp rate in seconds.
5. Press the PRGM key.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
6. Press the ▼ arrow key.	Bottom line reads "EXIT".
7. Press the PRGM key.	Returns to Measure Mode.

## User Info Select (Accuracy, SW version, Mfr date, SN)

The User Info Select registers are designed to provide the user with information about the manometer's hardware and software. This register provides read only information on the sensor's accuracy, software version, date of manufacture and serial number. It also allows the user to edit the Auto Shut-Off, Lockout and Start-Up Header Name features.

To configure the User Info Select registers, follow the steps below.

<b>Keystroke</b>	<b>Display</b>
1. From the Measure Mode press the PRGM key.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
2. Press the ▲ arrow key twice	Bottom line changes to "USER INFO SELECT".
3. Press the PRGM key.	Bottom line shows accuracy in % of Full Scale
4. Press the ▲ arrow key.	Bottom line shows software version number.
5. Press the ▲ arrow key.	Bottom line shows sensor manufacture date.
6. Press the ▲ arrow key. Instructions to set AUTO SHUT-OFF are in this manual.	Top line reads "AUTO SHUT OFF" and bottom line reads "ENTER TO SELECT".
7. Press the ▲ arrow key.	Bottom line shows serial number of the manometer.
8. Press the ▲ arrow key. Instructions for using LOCKOUT are on page 12.	Top line reads "LOCKOUT CODE" and bottom line reads "ENTER TO SELECT".
9. Press the ▲ arrow key. Instructions for editing the Header are on page 13.	Top line reads "HEADER NAME" and bottom line reads "MERIAM". The cursor flashes at bottom left.
10. Press the ◀ arrow key to go back to "USER INFO SELECT" screen.	Top line reads "PROGRAM MODE" and bottom line reads "USER INFO SELECT".

## **Auto Shut-Off**

Enabling the Auto Shut-Off feature allows the manometer to turn itself off after a user selected period of keypad inactivity. Selectable options include DISABLED, 10 Minutes (which is the factory shipped default), 20 Minutes, 30 Minutes, 45 Minutes and 60 Minutes. Disabling this feature requires the manometer to be turned off manually using the **On/Off** key.

To configure auto shut-off follow these steps:

<b>Keystroke</b>	<b>Display</b>
1. Follow steps 1-6 in the User Info Select table.	Top line reads "AUTO SHUT-OFF" and bottom line reads "ENTER TO SELECT".
2. Press the PRGM key, then the ▲ or ▼ arrow keys, until the desired shut-off time is shown.	Top line reads "AUTO SHUT-OFF" and bottom line toggles to "DISABLED", "10", "20", "30", "45" and "60" minutes .
3. Press the PRGM key.	Desired Auto Shut-Off time is selected, top line reads "AUTO SHUT-OFF" and bottom line reads "ENTER TO SELECT".
4. Press the ◀ arrow key three times.	Returns to Measure Mode.

### **NOTICE**

The "Auto Shut-Off" timer is suspended during Data Logging and Leak Test sessions to prevent accidental loss of information. Auto Shut-Off is automatically re-instated after completion of Data-Logging or Leak Test sessions.



## **Lockout Select**

Enabling the Lockout feature prevents unauthorized users from making changes to the configuration of the manometer. To enter the Program Mode when Lockout is active, the user must first enter the “password” (two-digit Lockout Code) within approximately 40 seconds of the display prompt. Failure to enter the correct two digit code within approximately 40 seconds will return the unit to Measure Mode. Any two-digit numeric code can be programmed. The factory Lockout Code of 00 (which is the default as shipped from the factory) disables the Lockout.

To set the Lockout Code, follow these steps:

<b>Keystroke</b>	<b>Display</b>
1. From Measure Mode press the PRGM key. (If the Lockout is set, enter the correct “password” when prompted.)	Top line reads “PROGRAM MODE” and bottom line reads “UNITS SELECT”.
2. Press the ▲ arrow key twice.	Bottom line reads “USER INFO SELECT”.
3. Press the ► arrow key then the ▲ arrow key five times.	Top line reads “LOCKOUT CODE” and bottom line reads “ENTER TO SELECT”.
4. Press the ► arrow key, then press the ▲ or ▼ arrow keys to change the first digit. Press the ► arrow key to proceed to second digit.	Bottom line shows the old Lockout Code. The cursor flashes at the first position while the value is changed, then cursor moves to the second position once the right arrow key is pressed.
5. Press the ► arrow key when the desired code is set.	Top line reads “LOCKOUT CODE” and bottom line reads “ENTER TO SELECT”. Lockout is activated.
6. Press the ◀ arrow key twice.	Returns to Measure Mode.

## Header Name

Follow the steps below to edit the Header Name.

<b>Keystroke</b>	<b>Display</b>
1. From the Measure Mode press the PRGM key.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
2. Press the ▲ arrow key twice.	Bottom line changes to "USER INFO SELECT".
3. Press the PRGM key.	Bottom line shows serial number.
4. Press the ▲ arrow key six times.	Top line reads "HEADER NAME" and bottom line reads "MERIAM". The cursor flashes at bottom left.
5. If header is correct press backspace key. If editing is desired proceed to step 7.	Top line reads "PROGRAM MODE" and bottom line reads "USER INFO SELECT".
6. Press the ◀ arrow key.	Returns to Measure Mode.
7. Press the ▲ or down arrow keys to set the correct alpha-numeric value.	Displays a number between 0 and 9, a letter from A to Z, / or a blank space.
8. Press the ▶ arrow key to accept entry.	Cursor advances one space to right.
9. Repeat steps 8 and 9 until the desired Header is shown.	
10. If an error is made press the ◀ (back) key until the cursor is over the incorrect value. Follow step 8 to correct. Press the ▶ arrow key to advance the cursor without changing values.	
11. When the Header is complete press the PRGM key until header accepted.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
12. Press the ◀ arrow key.	Returns to Measure Mode.

## Contrast Select

The Contrast Select register allows the user to adjust the character contrast of the LCD display to provide the best visibility for the ambient light conditions.

To adjust the contrast, follow these steps:

<b>Keystroke</b>	<b>Display</b>
1. From the Measure Mode press the PRGM key.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
2. Press the ▲ arrow key three times.	Bottom line reads "CONTRAST SELECT".
3. Press the PRGM key.	Top line reads "CONTRAST SELECT" and bottom line shows a numeric value.
4. Press the ▲ or ▼ arrow keys to increase or decrease the contrast value. A low number gives maximum contrast and a high number gives minimum contrast.	LCD lightens or darkens depending on the value set.
5. Press the PRGM key.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
6. Press the ◀ arrow key.	Returns to Measure Mode.

If an error is made during the contrast adjustment, pressing the ◀ key returns the display to the previous contrast setting.

## Data Logging

Data Logging can be used to record pressure measurements. Two record modes are supported; automatic and manual. In automatic mode, a pressure value is captured every 5 seconds for 20 minutes, resulting in 240 stored values. In manual mode, a pressure value is captured each time the PRGM key is pressed up to 240 values. The data collected during a logging session can be viewed upon completion.

<b>Keystroke</b>	<b>Display</b>
1. From the Measure Mode press the PRGM key.	Top line reads "PROGRAM MODE" and bottom line reads "UNITS SELECT".
2. Press the ▲ arrow key five times.	Bottom line reads "DATA LOGGING".
3. Press the PRGM key.	Top line reads "DATA LOGGING" and bottom line reads "RECORD".
4. Press the PRGM key.	Top line reads "RECORD MODE" and bottom line reads "AUTO" or "MANUAL".
5. Press the PRGM key at AUTO to start automatic logging or at MANUAL to start manual logging mode.	Top line reads "RECORDING X" and bottom line reads "XX.XX UNITS". AUTO records value every 5 seconds. Manual records value each time PRGM key is pressed.
6. To stop recording values at any time, press the ◀ key.	Top line reads "DATA LOGGING" and bottom line reads "RECORD".
7. To access recorded values, press the ▲ key.	Top line reads "DATA LOGGING" and bottom line reads "VIEW".
8. To view recorded values, press the PRGM key.	Top line reads "DATA LOG: 1" and bottom line displays the value. Continue pressing the ▲ key to view all values.
9. Press the ◀ key 3 times.	Returns to Measure Mode.



The "Auto Shut-Off" timer is disabled for Data Logging sessions. Be sure to end the session to re-enable the Auto Shut-Off timer.

## Leak Test

The Leak Test feature allows the user to determine the leak rate in the pneumatic system being monitored. Once configured, Leak Test monitors the measured pressure over time and displays the leak rate in “pressure units per minute” at the conclusion of the test. The maximum configurable leak test period is 1440 min (1 day). Pressing any key during the leak test will abort the test.

To enable Leak Test follow these steps:

<b>Keystroke</b>	<b>Display</b>
1. From the Measure Mode press the PRGM key.	Top line reads “PROGRAM MODE” and bottom line reads “UNITS SELECT”.
2. Press the ▼ arrow key twice.	Bottom line reads “LEAK TEST”
3. Press the PRGM key.	Top line reads “LEAK TEST” and bottom line reads “CONFIGURE”.
4. Press the PRGM key.	Top line reads “Leak Test Period” & bottom “X.X MIN”.
5. Use the ▲, ▼ & ► keys to input test time	Bottom line reads desired period; Ex. “ 20.0 MIN”.
6. Press the PRGM key.	Top line reads “LEAK TEST” and bottom line reads “CONFIGURE”.
7. Press the ▲ arrow key once.	Top line reads “LEAK TEST”, Bottom line reads “PRGM TO START”.
8. Press the PRGM key.	Top line displays MIN/MAX pressure values at left/right. Bottom line reads the current pressure value and units.  At end of test period, top line displays the leak rate in units per minute. Bottom line shows the live pressure reading.
9. Press PRGM key.	Return to Measure Mode.

### **NOTICE**

The “Auto Shut-Off” timer is disabled for Leak Test sessions. Be sure to end the session to re-enable the Auto Shut-Off timer.

## Re-Calibration

The Manometer can be re-calibrated in the field for zero, span, and linearity. The proper primary standards must be available prior to calibrating the Manometer. These standards should meet the accuracy requirements for your company or industry. Meriam Process Technologies follows the guidelines established by ANSI / NCSL Z540-1-1994 which requires that the primary standard be 4 times more accurate than the unit under test.

The re-calibration is not intended to replace the Factory Lab Calibration Procedure. It is intended to correct the curve fit if the actual sensor characteristics change slightly over time.

For sensors up to 200 PSI, Meriam recommends a  $\pm 0.0015\%$  of reading deadweight tester. For sensors 200 PSI and above, a  $\pm 0.0030\%$  of reading deadweight tester is recommended. If calibrating using inches of water units, be sure to match the reference temperature of water in both the unit under test and the M202.

1-point (within upper 50% of Full Scale), 5-point (nominal values of 0%, 25%, 50%, 75% & 100% of Full Scale), and restore factory default re-calibration options are offered. For the 5-Point re-calibration, points 2, 3 and 4 can be adjusted within  $\pm 1\%$  of reading around the nominal values. Point #5 can be adjusted within  $-1\%$  of reading around nominal. Point #1 is fixed. For example: for a 2000 inH<sub>2</sub>O sensor, Point # 2 (25%) can be edited from 495 to 505 inH<sub>2</sub>O. Point #5 (100%) can be edited from 1980 to 2000 inH<sub>2</sub>O.

The unit can only be re-calibrated if the calibration points are within 5 times the accuracy of the original factory calibration (e.g. @ 0.025% accuracy, the point limit is  $\pm 0.125\%$  of Full Scale). If the re-calibration procedure generates a new value outside this limit the procedure will fail. In this case the unit would need to be returned to the factory for service.

Once a re-calibration has been performed (either 1-point or 5-point) the unit will continue to allow future re-calibrations only with that type of re-calibration. In order to enable the other re-calibration type, the user must first "Restore Factory Defaults" and then choose the desired re-calibration method.

## Re-Calibration – 1 Point EDIT and START

To perform a 1-point re-calibration, apply a pressure between 50% and 100% of Full Scale and then follow these steps:

<b>Keystroke</b>	<b>Display</b>
1. With unit OFF, press and hold the MIN/MAX key, turn the unit on by pressing the ON/OFF key, then release MIN/MAX.	Top line reads "RE-CAL". Bottom line reads "EDIT".
2. Press the up arrow key until "START" is displayed on the bottom line.	Top line reads "RE-CAL". Bottom line reads "START".
3. Press the PRGM key.	Top line reads "RE-CAL START". Bottom line reads "1-POINT".
4. Press the PRGM key.	Top line reads "CAL POINT" and bottom line displays the cal point value.
5. Press the up/down arrow keys to edit the selected digit. Use the left/right arrow keys to change the cursor position. Value entered must be 50-100% of FS.	Bottom line displays the cal point value. The cursor flashes at the first position while the value is changed, then moves to the right position when the right arrow key is pressed.
6. Press the right arrow key while on the right most digit to proceed.	Top line reads "APPLY:" Bottom line displays the "CAL POINT" value.
7. Apply the input pressure indicated using an appropriate reference standard; press PRGM key.	Top line reads "RE-CAL". Bottom line reads "START", Manometer has been recalibrated.
8. Press the left arrow key.	Returns to Measure Mode

## Re-Calibration – 5 Point EDIT

To edit the calibration points for a 5 Point re-calibration follow the steps below.

NOTE: If the factory default values are acceptable, skip this section and proceed to the re-calibration 5-Point START procedure.

<b>Keystroke</b>	<b>Display</b>
1. With unit OFF, press and hold the MIN/MAX key, turn the unit on using the ON/OFF key, then release	Top line reads "RE-CAL". Bottom line reads "EDIT".
2. Press the PRGM key.	Top line reads "CAL POINT 1". Bottom line displays the cal point value.
3. Press the up/down arrow keys to edit the selected digit. Use the left/right arrow keys to change the cursor position. <i>Note: For 0% go directly to step 4.</i>	Bottom line displays the cal point value. The cursor flashes at the first position while the value is changed, then moves to the right position when the right arrow key is pressed.
4. Press the right arrow key while on the right most digit to proceed.	Top line reads "CAL POINT 2". Bottom line displays the cal point value.
5. Repeat steps 3 and 4 for CAL POINTS 2, 3, 4 and 5.	Top line reads "CAL POINT 2/3/4/5". Bottom line displays the cal point value.
6. After editing CAL POINT 5 press the right arrow key while on the right most digit to proceed.	Top line reads "RE-CAL". Bottom line reads "EDIT".
7. To perform the 5-point re-cal, press the up arrow key until START is displayed on the bottom line. OR To exit without performing the 5-point re-cal press the left arrow key	Top line reads "RE-CAL". Bottom line, "START". Continue with 5-Point Re-calibration procedure at step 3 on next page. OR Returns to Measure Mode.



## Re-Calibration – 5 Point START

To begin the 5-point re-calibration procedure, turn the unit OFF and follow the steps below.

<b>Keystroke</b>	<b>Display</b>
1. Press and hold the MIN/MAX key and turn the unit on by pressing the ON/OFF key.	Top line reads "RE-CAL". Bottom line reads "EDIT".
2. Press the up arrow key until "START" is displayed on the bottom line.	Top line reads "RE-CAL". Bottom line reads "START".
3. Press the PRGM key.	Top line reads "RE-CAL" Bottom line reads "1-POINT".
4. Press the up arrow key until "5-POINT" is displayed on the bottom line.	Top line reads "RE-CAL START". Bottom line reads "5-POINT".
5. Press the PRGM key.	Top line reads "POINT 1 – ZERO:" Bottom line displays live applied pressure.
6. Vent P1 and P2 ports to atmosphere and simultaneously press the MIN/MAX and HOLD keys, then release.	Unit takes new zero. Top line reads " POINT 1 - ZERO:" Bottom line displays live applied pressure. POINT 1 has been taken.
7. Press the right arrow key while on the right most digit to proceed.	Top line reads "POINT 2 - APPLY:". Bottom line displays the cal point value to apply.
8. Apply the indicated calibration point pressure using external pressure standards. After pressure is stable, press the right arrow key.	Top line reads "POINT 3 - APPLY:". Bottom line displays the cal point value to apply.
9. Repeat step 8 for CAL POINTS 4 and 5.	Top line reads "POINT 4/5 - APPLY" Bottom line displays the cal point value.

10. Use up or down arrow keys to select NO or YES when asked "Save?" the Re-Calibration data.	Top line reads "SAVE?". Bottom line reads "NO" or "YES".
11. Press the PRGM key at YES to save the Re-Calibration data or at NO to exit without saving.	Top line reads "RE-CAL". Bottom line reads "START". Re-cal is complete.
12. Press the left arrow key.	Returns to Measure Mode.

## Re-Calibration – Restore Factory Defaults

To restore the re-calibration data to the factory defaults, follow these steps:

<b>Keystroke</b>	<b>Display</b>
1. With unit OFF, press and hold the MIN/MAX key, turn the unit on using the ON/OFF key, then release.	Top line reads "RE-CAL". Bottom line reads "EDIT".
2. Press the up arrow key twice.	Top line reads "RE-CAL". Bottom line reads "RESTORE DEFAULTS".
3. Press the PRGM key.	Top line reads "RESTORE DEFAULTS". Bottom reads "YES" or "NO".
4. Use the up and down arrow keys to select YES or NO when asked to restore defaults.	Top line reads "RESTORE DEFAULTS". Bottom reads "YES" or "NO".
5. Press the PRGM key at YES to restore the Factory Default Calibration data or at NO to exit without restoring.	Top line reads "RE-CAL". Bottom line reads "RESTORE DEFAULTS". Factory defaults have been restored.
6. Press the left arrow key.	Returns to Measure Mode.

# Specifications

## Type, Range and Display Resolution

### **Absolute Isolated Ranges for M202:**

17 psia (900 mmHg) – XX.YYY (XXX.YY)

38 psia (2000 mmHg) – XX.XXY (XXXX.Y)

## Accuracy

M202-AI0017:  $\pm 0.02$  % F.S. (F.S. = 900 mm Hg)

M202-AI0038:  $\pm 0.015$  % F.S.\* from 0-1000 mm Hg

$\pm 0.025$  % F.S.\* from 1000-2000 mm Hg

\*F.S. = 2000 mm Hg Absolute

Accuracy statements include the combined affects of linearity, repeatability, hysteresis and temperature over the specified operating temperature range.

Warm up time = 5 minutes.

Zero the M202 at working ambient temperature before use.

## Temperature

Storage =  $-40^{\circ}\text{C}$  to  $+60^{\circ}\text{C}$  ( $-40^{\circ}\text{F}$  to  $+140^{\circ}\text{F}$ )

Operating =  $-5^{\circ}\text{C}$  to  $+50^{\circ}\text{C}$  ( $23^{\circ}\text{F}$  to  $+122^{\circ}\text{F}$ ) I.S. models

$-20^{\circ}\text{C}$  to  $+50^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$  to  $+122^{\circ}\text{F}$ ) G.P. models

## Media Compatibility

Use with gases and liquids compatible with 316L SS

## Pressure Limit: 2x range

## Connection

1/8" female NPT, 316L SS.

P1 is the pressure connection and P2 is plugged with factory fitting.

## Battery Type

4 each AA alkaline batteries.



ATEX certified models require the use of approved batteries to maintain the ATEX certification. Refer to Dwg. No. 9R000056 "M2 Intrinsically Safe Control Document" for a list of batteries approved for hazardous atmospheres. A copy of this drawing accompanies each unit shipped.



Remove and / or replace batteries in non-hazardous areas only.

**Battery Operation**

>100 hours continuous use, 1 year shelf life, auto power off programmable at Disabled, 10, 20, 30, 60 or 90 minutes

**Enclosure**

(6.9" × 3.8" × 2.3") Polycarbonate, Permanently Static Dissipative, ESD Protection

**Enclosure with Boot**

(7.2" × 4.2" × 2.5")

**Page Intentionally Left Blank**

# Changing the Batteries



ATEX certified models require the use of approved batteries to maintain the ATEX certification. Refer to Dwg. No. 9R000056 “M2 Intrinsically Safe Control Document” for a list of batteries approved for hazardous atmospheres. A copy of this drawing accompanies each unit shipped.



Remove and / or replace batteries in non-hazardous areas only. Also see the Certification/Safety/Warnings section of this manual for additional important information.

The manometer is powered by four, 1.5 volt AA size batteries. When the output of the batteries under load drops, the display will alternate between “LOW POWER DETECT” and “REPLACE BATTERY”. Low power may affect performance. The unit should not be used to measure pressure in this condition. All four batteries should be replaced.

To replace the battery locate the battery compartment at the bottom rear of the manometer, as shown here.



Remove the two screws on either side of the battery cover by turning them counterclockwise until fully disengaged from the manometer base. Lift the cover from the back of the unit.

Remove the batteries by pulling the positive side first straight out of the battery compartment. Note the positive (+) and negative (-) battery polarity markings at the bottom of the compartment, as shown here.



To install the four batteries: 1) Make sure polarity of battery matches the markings in the compartment. 2) 1st place the (+) end of the battery into the battery slot. 3) Then push in the (-) end of the battery until seated in the bottom of the battery slot. The battery compartment has stand offs molded into the side of the compartment. When a battery is installed with the polarity reversed, the stand offs prevent the negative battery terminal from contacting the positive terminal in the battery compartment. The unit will not power up when a battery is installed this way. Should this happen, simply reverse the battery to align the polarity.

With the batteries secured in the battery compartment, replace the compartment cover. The cover has only one correct alignment. The “WARNING DO NOT OPEN IN EXPLOSIVE ATMOSPHERE” statement on the battery cover must be visible and aligned in the middle of the manometer case.

To secure the cover, torque the screws clockwise to 1.6-1.8 in-lbs. Do not over tighten.

**NOTICE** To prevent internal damage to circuitry, do not substitute screw lengths for the factory supplied screws.

## User Connections

P1 connection: 1/8” female NPT, 316L SS.

The pressure connection is marked P1 as shown below.

P1 is the pressure connection for the M202.



Do not remove the factory installed P2 plug.

## **NOTICE**

User must use a wrench on the pressure manifold when installing user's 1/8" NPT fitting. Do not tighten the fitting without using a wrench on the pressure manifold. Failure to use a wrench on the manifold will damage the plastic enclosure and void warranty. No torque should be applied to the manifold with respect to plastic enclosure.

## Service and Calibration

If the M202 cannot be zeroed, recalibrated or is damaged, it must be returned to the factory for servicing. In this case, contact the Meriam Process Technologies representative in your area or call the factory at the numbers listed below for a Return Material Authorization (RMA) number.

**DO NOT send any unit in for service without first contacting Meriam for a Return Material Authorization (RMA) number. If this number has not been obtained and clearly marked on the return packaging, the unit will be returned at the shipper's expense.** An RMA number will be provided by the Meriam Repair Department when you call, fax or e-mail your information. Certification for Non-Hazardous Materials will also be required. The RMA number must accompany all incoming packages to insure proper tracking, processing and repair work.

To assist us in processing your service request, please have the Model & Serial Number of the unit available when you call. This information is located on the product label.

Meriam Process Technologies  
10920 Madison Ave.  
Cleveland, OH 44102  
Ph. (216) 281-1100 FAX (216) 281-0228  
E-mail [sales@meriam.com](mailto:sales@meriam.com)  
Web [www.meriam.com](http://www.meriam.com)